



Vermont Tent Company
Your Premier Event Rental Partner

14 Berard Drive, South Burlington, Vermont 05403
800.696.8368 f 802.863.6735 www.vttent.com

Instructions:Oven Operation

OVENS OPERATE ON PROPANE GAS ONLY OVENS OPERATE ON 110 VOLTS AC ONLY

To turn on oven:

1. Make sure switch is on auto
 2. Make sure gas is turned on
 3. Make sure oven is plugged in
 4. Turn mode switch to cook
 5. Set temperature knob to desired setting
 6. You will hear a sparking sound... the oven is attempting to light the pilot
 7. Before the oven pilot burner will light, all air must be cleared from the pilot line
 8. It may not light on the first attempt!!!
 9. If the red indicating light does not come on in the first 60 seconds, turn mode switch to off and repeat Step 6
 10. It may be necessary to repeat several times
 11. When red indicating light comes on... the oven is calling for heat
 12. When red indicating light goes off... oven is at temperature
 13. Ovens should always remain under cover
 14. Wind can directly effect proper ignition of ovens
-