



Vermont Tent Company
Your Premier Event Rental Partner

14 Berard Drive, South Burlington, Vermont 05403
800.696.8368 f 802.863.6735 www.vttent.com

Troubleshooting Equipment

CATERING EQUIPMENT: TROUBLE SHOOTING PROCEDURES

OVEN:

- Check **Power** (make sure the fan is plugged into a 110 volt outlet).
- Check **Valve** on the gas tank (make sure the inside valve is not loose).
- Check **Threads** on the regulator (make sure it is not cross threaded).
- Be sure the **Gas** is turned on.
- Be sure the **Timer** is in the off position (it will buzz if not completely turned off).

FREEZER/REFRIGERATOR:

- Check **Power** (Be sure the unit is plugged into a working outlet).
- Inside** be sure the light is on (tightly screwed in).
- Defroster** (If the unit is plugged into a working outlet and is still not running, look for a small **Black Button** in the back left hand corner of the unit. Turn it slowly until the unit starts).

GAS GRILLS:

- Check **Gas** (make sure the inside valve is not loose).
- Be sure the **Gas** is turned on.
- All **Valve** controls should be in the off position before lighting.
- You should light 1 bay at a time.

INDUCTION TABLE TOP COOKERS;

- Check **Power** (Be sure the unit is plugged into a working outlet).
- Only One Unit per Circuit is allowed** (otherwise they will not work).
- Only **Induction Pans** can be used for these table top cookers.

CRESCOR:

- Check **Power** (Be sure the unit is plugged into a working outlet with 20 Amps).
- Check the **Water Pan** (Make sure there is water in the pan inside the unit).
- Be sure the **Door** is closed tightly.

COFFEE MAKERS:

- Check **Power** (Be sure the unit is plugged into a working outlet).
- Only **One Unit per circuit**. You may have to move the unit to a different outlet.

GAS STOVE /OVEN:

- Check **Gas** tank valve (Be sure the inside valve is tight).
- Check **Thread** on regulator (Make sure it is on straight).
- Be sure the **Gas** is turned on.
- Keep Red Button Depressed** until the pilot light is on (30 seconds) to light the oven part of the unit. To get to the pilot light pull out the rack in the bottom of the oven.
- Pilot Lights** on the top burners may be lit without turning the knobs on.

13" BURNER:

- Check the **Gas Tank** to make sure it is turned on.
 - Be sure the inside **Valve** is tight.
 - Be sure the **Small Valve** is in the correct position and light the burner.
-