

Instructions: Oven Operation

OVENS OPERATE ON PROPANE GAS ONLY OVENS OPERATE ON 110 VOLTS AC ONLY

To turn on oven:

- 1. Make sure switch is on auto
- 2. Make sure gas is turned on
- 3. Make sure oven is plugged in
- 4. Turn mode switch to cook
- 5. Set temperature knob to desired setting
- 6. You will hear a sparking sound... the oven is attempting to light the pilot
- 7. Before the oven pilot burner will light, all air must be cleared from the pilot line
- 8. It may not light on the first attempt!!!
- 9. If the red indicating light does not come on in the first 60 seconds, turn mode switch to off and repeat Step 6
- 10. It may be necessary to repeat several times
- 11. When red indicating light comes on... the oven is calling for heat
- 12. When red indicating light goes off... oven is at temperature
- 13. Ovens should always remain under cover
- 14. Wind can directly effect proper ignition of ovens